

Product shown with optional meter.





# TRISTAR METER-2™ TRISTAR REMOTE METER-2

DIGITAL DISPLAYS FOR TRISTAR CONTROLLERS

Morningstar's TriStar Meter-2 (TS-M-2) and TriStar Remote Meter-2 (TS-RM-2) are advanced digital meters that may be used with any TriStar™ solar controller. These two meters are identical except that the TS-M-2 is mounted on the controller and the TS-RM-2 is flush mounted up to 30 meters (98.4 feet) away from the controller.

The TriStar meters are 2 x 16 character LCD's that display extensive system and controller information, logged data, bar graph metering as well as alarms and faults for easy troubleshooting. The information may be shown in English, French, German, Portuguese or Spanish languages.

In multi-controller systems the TS-M-2 and TS-RM-2 are networkable using Morningstar's MeterHub to allow individual controller data and aggregate system data to be displayed together on a single meter.

# Key Features and Benefits

# Easy to Install

- Uses standard 6 conductor RJ-11 connectors.
- TS-RM-2 fits a "double gang" electrical box and includes 30 meters (98.4 feet) of cable.
- Both data and meterbus power flow over a single cable.
- Network supports up to 15 devices and, optionally, more than one meter per system.

#### Easy to Use

- Four directional pushbuttons for easy navigation of display screens.
- Backlighting to enhance readability.
- Meter may be added during initial controller installation, added as an upgrade anytime in the future or connected temporarily for troubleshooting and then using this same meter at other sites.

#### Networking Capability

- Displays individual controller data from up to 14 TriStars with optional Morningstar Meterhubs.
- Aggregates system data to show total charge, load and battery charge/discharge state.
- Auto detects any device found on the network.

# Technical Specifications

#### Electrical

 Self consumption 7.5 mA 42.5 mA (backlight on)

#### Mechanical

 TS-RM-2 mounting plate dimensions

Plate material

 Meter weight TS-M-2

TS-RM-2 Connector type

• TS-M-2 cable

• TS-RM-2 cable

• Cable temperature

116 x 116 mm (4.56 x 4.56") powder coated steel

0.23 kg / 0.5 lb 0.18 kg / 0.4 lb RJ-11 (6-pin)

0.13 m / 5 in - 6 conductor 30 m / 98.4 ft - 6 conductor

60°C rating

#### Environmental

• Operating temperature

• LCD temp. rating • Storage temperature

Humidity rating

Tropicalization

-40°C to +60°C

-20°C to +70°C

-55°C to +85°C 5 to 95 % (NC)

conformal coating on both sides of circuit board

### Certifications

- CE Compliant
- RoHS Compliant
- ETL Recognized Component

#### Compatibility

• TS-45, TS-60, TS-MPPT-45, TS-MPPT-60

## DISPLAYS FOR TRISTAR METER-2™ & TRISTAR REMOTE METER-2™

|                                 |                 | TriStar         |           | TS MPPT         |                                     |                 | TriStar         |           | TS MPPT         |
|---------------------------------|-----------------|-----------------|-----------|-----------------|-------------------------------------|-----------------|-----------------|-----------|-----------------|
| Operating Data                  | Solar<br>Charge | Load<br>Control | Diversion | Solar<br>Charge | Commands                            | Solar<br>Charge | Load<br>Control | Diversion | Solar<br>Charge |
| Battery Voltage                 | <b>V</b>        | <b>V</b>        | V         | V               | Reset Ah/kWh Counters               | <b>V</b>        | V               | V         | V               |
| Solar Input Voltage             | <b>V</b>        |                 |           | ~               | Reset Ah/kWh Counters               | <b>V</b>        | V               | V         | V               |
| Charging Current                | <b>V</b>        |                 |           | V               | Reset Min/Max Battery V             | <b>V</b>        | V               | V         | V               |
| Load/Diversion Current          |                 | <b>/</b>        | <b>V</b>  |                 | Equalize Start/Stop                 | V               |                 | V         | V               |
| Battery Sense Voltage           | <b>V</b>        | <b>/</b>        | <b>V</b>  | V               | Load On/Off                         |                 | V               |           |                 |
| Battery Temperature             | V               | ~               | V         | V               | Reset Battery Service Reminder      | <b>V</b>        | V               | <b>V</b>  | V               |
| Battery Min/Max Voltage         | V               | ~               | V         | V               | User Settings                       |                 |                 |           |                 |
| Charging Watts                  | V               |                 |           |                 | Set MeterBus Address                |                 |                 |           | V               |
| Load/Diversion Watts            |                 | V               | V         |                 | Set Meter Display Language          | V               | V               | V         | V               |
| Daily Charge Wh                 |                 |                 |           | V               | Set Temperature Units (°C/°F)       | <b>V</b>        | V               | <b>V</b>  | V               |
| Heatsink Temperature            | V               | V               | V         | V               | Logged Data <sup>1</sup>            |                 |                 |           |                 |
| Settings Data                   |                 |                 |           |                 | Days of Daily Log Data              | Last 60 Days    |                 |           |                 |
| Nominal System Voltage          | ~               | <b>V</b>        | V         | V               | Battery Voltage Min (Daily)         | <b>/</b>        | <b>/</b>        | <b>V</b>  | V               |
| Battery Type                    | ~               |                 | /         | ~               | Battery Voltage Max (Daily)         | <b>/</b>        | <b>V</b>        | <b>V</b>  | V               |
| Regulation Type                 | ~               |                 | ~         | ~               | Charge Ah (Daily)                   | <b>V</b>        |                 |           | V               |
| Absorption Charge Voltage       | V               |                 | 7         | ~               | Load Ah (Daily)                     |                 | <b>V</b>        | <b>V</b>  |                 |
| Float Charge Voltage            | /               |                 | ~         | /               | Battery Wh (Daily)                  |                 |                 |           | V               |
| Equalize Charge Voltage         | V               |                 | ~         | /               | Solar Vmax (Daily)                  |                 |                 |           | V               |
| Low Voltage Disconnect Value    |                 | V               |           |                 | Battery Watts Max (Daily)           |                 |                 |           | V               |
| Low Voltage Reconnect Value     |                 | /               |           |                 | Time in Absorption (Daily)          |                 |                 |           | V               |
| Days Between Equalizations      | /               |                 | /         | ~               | Time in Float (Daily)               |                 |                 |           | <b>V</b>        |
| •                               |                 |                 |           |                 | Time in Equalize (Daily)            |                 |                 |           | V               |
| Diagnostic Data                 |                 |                 |           |                 | Faults (Daily)                      | <b>V</b>        | V               | <b>/</b>  | V               |
| Ah Total/Since Last Reset       | V               | V               | V         | V               | Alarms (Daily)                      | <b>V</b>        | <b>V</b>        | <b>/</b>  | V               |
| kWh Total/Since Last Reset      | <b>V</b>        | /               |           |                 | Total System Data (multiple control | lers)           |                 |           |                 |
| Charge State                    | <b>V</b>        |                 | <b>V</b>  | /               | Charge Current                      | <b>V</b>        |                 |           | <b>V</b>        |
| Load State                      |                 | <b>V</b>        |           |                 | Load Current                        |                 | <b>V</b>        |           |                 |
| Fault List                      | <b>V</b>        | V               | V         | V               | Diversion Current                   |                 |                 | <b>/</b>  |                 |
| Alarm List                      | <b>V</b>        | <b>V</b>        | V         | V               | Charging Watts                      | <b>V</b>        |                 |           | <b>V</b>        |
| Days Since Last Equalization    | <b>/</b>        |                 | <b>V</b>  | <b>V</b>        | Charging Ah                         | <b>V</b>        |                 |           | <b>V</b>        |
| Days Since Last Battery Service | <b>/</b>        |                 | <b>V</b>  | <b>V</b>        | Charging Wh                         | <b>V</b>        |                 |           | <b>/</b>        |
| Cumulative Hours of Service     | V               | <b>/</b>        | <b>V</b>  | V               | Load Watts                          |                 | V               |           |                 |
| Controller Version              | <b>V</b>        | <b>V</b>        | <b>V</b>  | <b>V</b>        | Load Ah                             |                 | V               |           |                 |
| Meter Version                   | <b>V</b>        | <b>V</b>        | <b>V</b>  | <b>V</b>        | Diversion Watts                     |                 |                 | V         |                 |
| Mode of Operation               | <b>V</b>        | <b>/</b>        | <b>V</b>  | <b>V</b>        | Diversion Ah                        |                 |                 | V         |                 |

<sup>&</sup>lt;sup>1</sup>Logged data available on TriStars with software v13 or later.

WARRANTY: Five year warranty period. Contact Morningstar or your authorized distributor for complete terms.

**AUTHORIZED MORNINGSTAR DISTRIBUTOR:** 



8 Pheasant Run
Newtown, PA 18940 USA
Tel: +1 215-321-4457 Fax: +1 215-321-4458
E-mail: info@morningstarcorp.com
Website: www.morningstarcorp.com

